


# Water Pump Compact

Installation

Apply grease to **ALL** bolts prior to assembly  
 Note to Plumber.  
 Where required, fit appropriate Back Flow Prevention.

If connecting to non portable water warning label must be displayed.

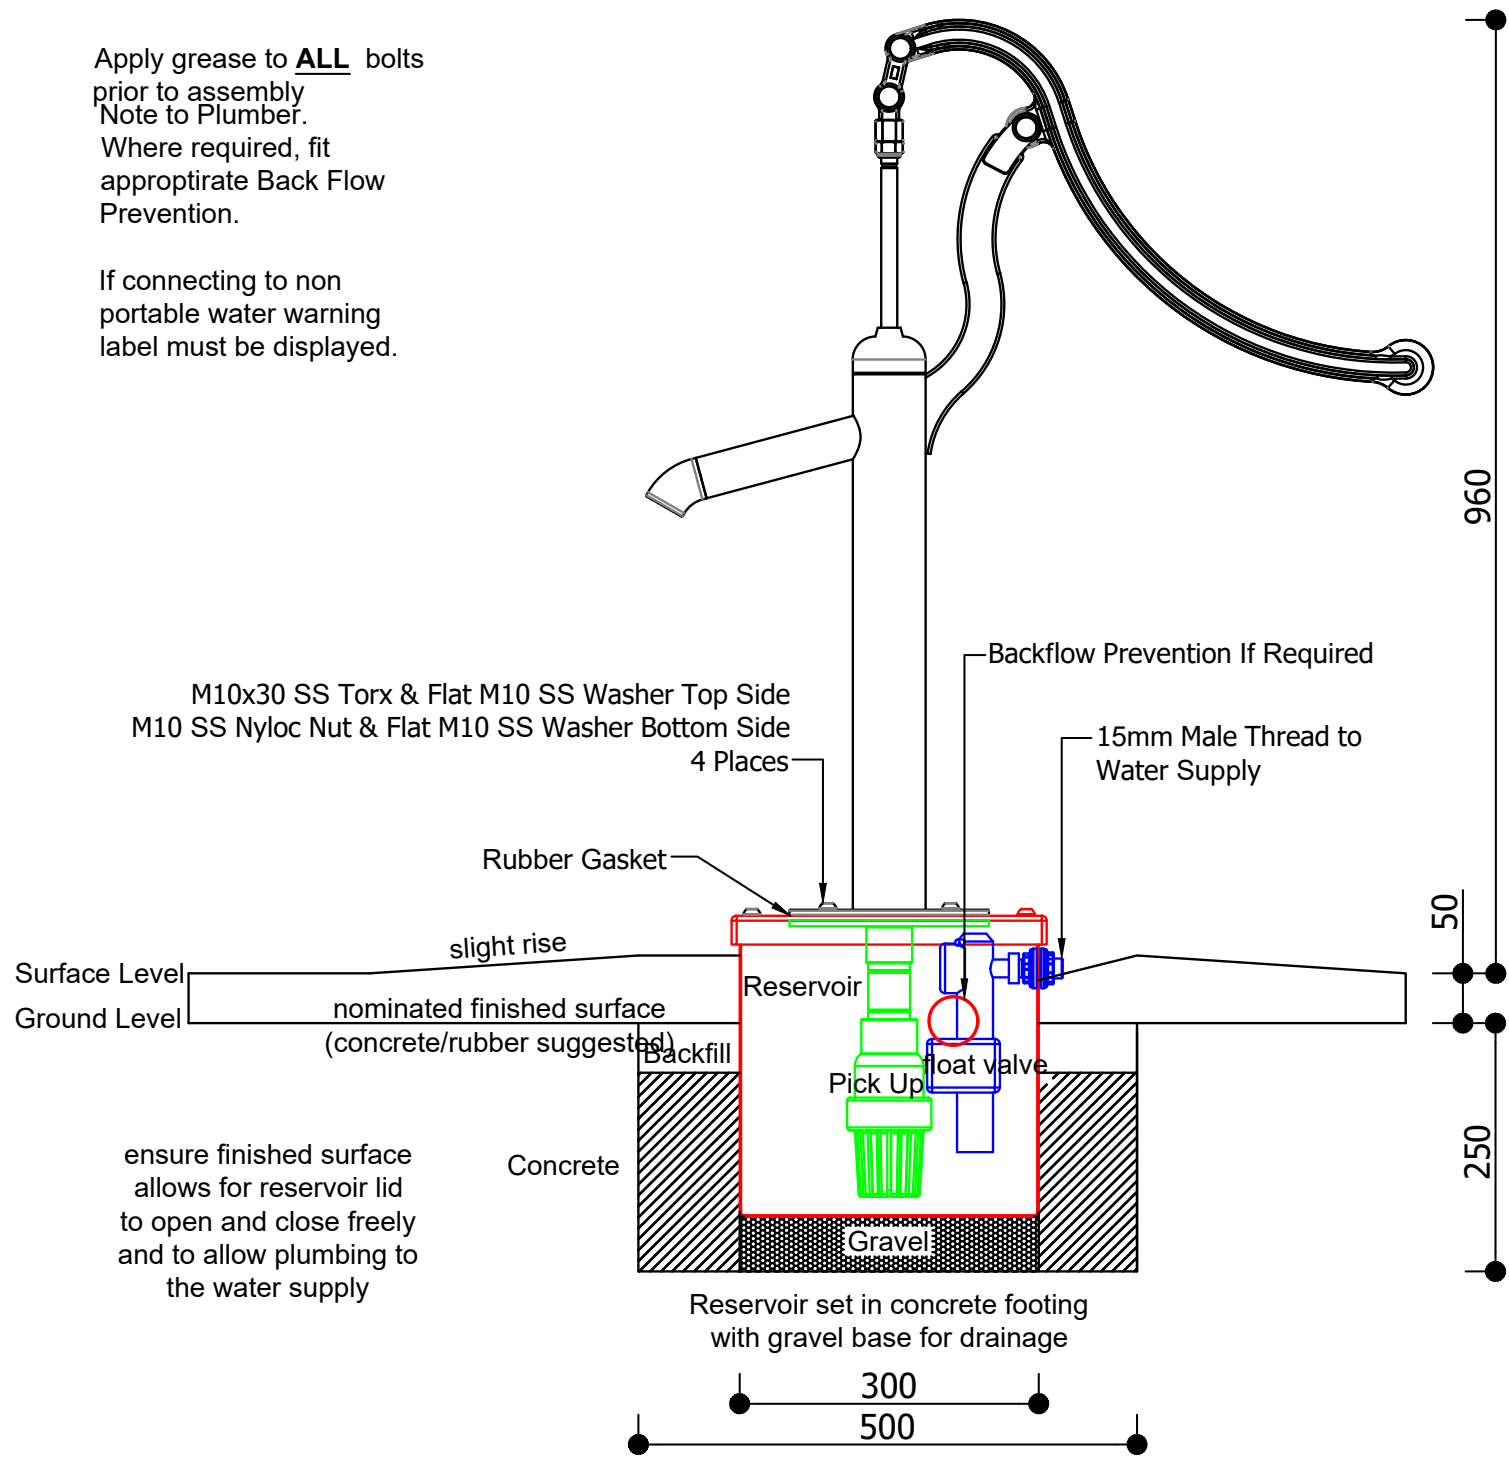

### Footing quantities and depths From ground level

Item	Qty	Hole Diameter	Hole Depth
Pump	1	500mm	250mm

**Note:**

This product is deigned for 50mm softfall. Check the proposed on site softfall depth. If it is not 50mm, please adjust depths of post holes accordingly, to achieve correct overall subsurface depth. This will maintain corect height of equipment above undersurface level.

## Water Pump Compact

SEDI REM QUID MA CONSEQUAE DOLUPTAT QUATIUN DELITATIONET EXCERA NIHILIQUIS AD QUISTIS EATUR, NON REHENIS EATIONSECAE  
 NON NAM QUI VERE DENDAE AUT ID EOSAM ETUR SIMAGNIET, ILIT AUT AUT ET PORI CUM QUAS RE, EATUR?  
 CAEPROVID UT HICIUR SIT UT DOLOREM VOLOR SIT QUI TEMPEL MA CONSEQUI OD ET AUT UT LIA IUS DOLESEQUE CUS MOLORROVIT



Rev#	DATE	PR#
-	-	-

Playbook ID <b>PN1226</b>	DWG No. <b>01</b>	SCALE <b>NTS</b>	ISSUE <b>A</b>	DRAWN BY <b>LC</b>	DATE <b>01-03-2023</b>
Job No.	Job Name	Planned by	Plan date	QTY	MADE BY

**natura**  
 Australian nature playgrounds